

Technical Instructions for installing the Engler Scale – Aire compressor

Engler Engineering Corporation
1099 East 47th Street, Hialeah, Florida 33013
800-445-8581 – 305-688-8581 – FAX 305-685-7671
Web site: www.englerusa.com Help site: www.engler411.com

Engler Engineering Corporation makes every effort to only produce the highest quality products and we pride ourselves on that fact. In the event that you need to replace your compressor we have written this technical manual to assist you in the easy exchange of your Scale – Aire compressor.

The first thing you will need to do is disconnect (quick disconnect) the yellow air hose leading to the Scale – Aire control box.

These are the tools you will need to take the compressor off of the H frame:



A 7/16 socket with ratchet and an adjustable wrench.

There are four fasteners that hold the compressor to the bracket. Insert the socket into the underside of the bracket, use the adjustable wrench to hold the fastener from the top and loosen the fastener.



Do this with all four fasteners.

Remove the compressor.

Place the new compressor on the brackets and line up the mounting holes.

Place the bolt (with washer) on your finger and carefully insert through the mounting hole. **While holding the bolt in place**, add the flat washer and the split washer onto the bolt and thread the nut on the bolt. Tighten firmly.





Do this for all four fasteners.

Reconnect the yellow air hose to the Scale – Aire control box.

If you have any problems or concerns please call 800-445-8581 during regular business hours (eastern time).



Web: www.englerusa.com / Email: info@englerusa.com
www.dynaxusa.com, www.ez-stretcher.com for brochures, manuals
and "how to" pages please visit www.engler411.com

Engler Engineering Corporation
1099 East 47th Street - Hialeah, Florida 33013 USA
Tel: (800) 445-8581 / (305) 688-8581 / Fax: (305) 685-7671



*Proudly made
in the U.S.A.*